

SSWTABLE, SSWTABLE36, SSWTABLE60, SSWTABLE72

Stainless Steel Work Table Assembly Instructions

16 Hex Set Screws



Hex Wrench

1

Locate the accessory bag and remove the 16 hex set screws and 1 hex wrench. Locate 4 table legs, one table top and one table base.

2



Table Top

Place table top upside down on soft cloth surface to prevent scratches. Insert one leg into a corner support.

3



Using the hex wrench, loosely tighten the hex set screws (with the HEX side visible) into the corner support.

4



Each corner support requires two hex set screws. Wait until the table is completely assembled before securely tightening each hex set screw.

5



Adjustable Table Base

After three legs have been loosely attached, lower the adjustable table base and insert each leg through the base holes. Then fix the table base on the marked label position.

6



Slide the last leg.

7



Each corner support requires two hex set screws. Wait until the table is completely assembled before securely tightening each Hex screw.

8



All four legs can be adjusted for surfaces that aren't completely level. Rotate the plastic foot pad to compensate for differences in floor surface.

9



Turn the table over AFTER securely tightening each hex set screw. Two people may be required to rotate the table.