

ITEM # SSBGS

SINGLE BURNER LP CAMPING STOVE

INSTRUCTION MANUAL



READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS PRODUCT.

This manual provides important information on proper operation & maintenance. Every effort has been made to ensure the accuracy of this manual. These instructions are not meant to cover every possible condition and situation that may occur. We reserve the right to change this product at any time without prior notice.

IF THERE IS ANY QUESTION ABOUT A CONDITION BEING SAFE OR UNSAFE, DO NOT OPERATE THIS PRODUCT!

DO NOT RETURN THIS PRODUCT TO THE RETAILER - CONTACT CUSTOMER SERVICE.

If you experience a problem, have questions or need parts for this product, call Customer Service at 1-636-532-9888, Monday-Friday, 8 AM - 4 PM Central Time. A copy of the sales receipt is required.

Visit online <http://www.sportsmanseriesbrand.com>

FOR CONSUMER USE ONLY - NOT FOR PROFESSIONAL USE.

KEEP THIS MANUAL, SALES RECEIPT & APPLICABLE WARRANTY FOR REFERENCE.

SPECIFICATIONS

Auto Ignite

Stainless Steel Construction with Steel Burner

Adjustable Burner Provides 12,000 BTUs - 13,500 BTUs

Requires Hose & Regulator Kit Type 1 Connection w/5/8" MIP (Sold Separately)

IMPORTANT SAFE OPERATION PRACTICES



WARNING! This symbol points out important safety instructions which, if not followed, could endanger the personal safety and/or property of yourself and others. Read and follow all instructions in this manual before attempting to operate this machine. Failure to comply with these instructions may result in injury. When you see this symbol. **HEED ITS WARNING!**



DANGER! This machine was built to be operated according to the safe operation practices in this manual. As with any type of equipment, carelessness or error can result in serious injury.

1. Read, understand, and follow all instructions on the machine and in the manual(s) before attempting to assemble and operate. Keep this manual in a safe place for future and regular.
2. Be familiar with all controls and their proper operation. Know how to stop the machine and disengage.
3. Never allow children under 16 years of age to operate this machine. Children 16 and over should read and understand the instructions and safe operation practices in this manual and on the machine and be trained and supervised by an adult.
4. Never allow adults to operate this machine without proper instruction. Do not use if under the influence of alcohol or drugs.

DANGER

This is an ATTENDED appliance. Do NOT leave this appliance unattended while the burner is lit or while heating oil, grease, water or cooking food. Monitor the appliance when hot after use [oil, grease or water above 100° F (38°C)]. Heated liquid and equipment can remain at scalding temperatures long after cooking has ended.

DANGER

- USE THIS PROPANE COOKER ONLY OUTDOORS IN NON-CONFINED AREAS
- DO NOT OPERATE THIS PROPANE COOKER UNATTENDED
- KEEP AT LEAST SEVERAL FEET OF CLEARANCE ON ALL SIDES TO ALLOW PROPER VENTILATION

WARNING! This appliance is for OUTDOOR use only. Do NOT use in a building, garage, tent or any other enclosed area. Do NOT use in or on a recreational vehicle or boat. NEVER use this appliance as a heater.

IMPORTANT SAFETY INSTRUCTIONS

1. Shut off gas to the appliance.
2. Extinguish any open flame.
3. If odor continues, keep away from the appliance and immediately call your Fire Department.
4. Never operate this appliance within 10 feet (3.05m) of any structure, combustible material or other gas cylinder. Do not locate this appliance under ANY overhead construction.
5. Only use propane burning units outdoors. Risks include fire and carbon monoxide fumes. Lack of ventilation can cause injury or death.
6. Never operate this appliance within 25 feet (7.5m) of any flammable liquids or vapors.
7. Do not fill cooking vessel beyond maximum fill line (if applicable).
8. When cooking with oil/grease, always use a thermometer and never allow the oil/grease to get hotter than 350°F (177°C). If the temperature exceeds 350°F (177°C) or if oil begins to smoke, immediately turn the burner or gas supply OFF.
9. Heated liquids and equipment remain at scalding temperatures long after the cooking process. Never touch cooking appliance until liquids have cooled to 100°F (38°C) or less.
10. If a fire should occur, keep away from the appliance and immediately call your Fire Department. Do not attempt to extinguish an oil/grease fire with water. When cooking, have a Type BC or ABC fire extinguisher readily available. A Type BC or ABC fire extinguisher may, in some circumstances, contain the fire.
- 11) Do not locate this appliance under any overhead construction. Keep a minimum clearance of 10 ft. (3.05m) from the sides, front and back of the appliance to ANY construction. Keep the area clear of any combustible material. Do not use on or under any apartment or condo balcony or deck.
- 12) When cooking, the fryer/boiler must be on a level, stable, noncombustible surface such as brick, concrete or dirt. Not suitable are surfaces such as wood, asphalt or plastic which may burn, blister or melt.
- 13) Check cooker fittings for leaks before use. Keep fuel supply hose away from any heated surfaces
- 14) Have a Type BC or ABC fire extinguisher readily available. In the event of an oil/grease fire, do not attempt to extinguish with water. Immediately call the Fire Department. A Type BC or ABC fire extinguisher may, in some circumstances, contain the fire.

Leak Test

Before lighting the appliance, a thorough leak test must be satisfactorily completed using a non-ammonia soapy water solution (50% non-ammonia soap and 50% water). This is to be applied with a small brush to all gas joints after the cylinder valve is opened (no more than 1/2 turn). If bubbles are seen, indicating a leak, turn off the cylinder and tighten the leaking connection until a further leak test shows no leaks.

To Light The Burner

Open the main gas valve, push the gas control knob in and turn it towards the MAX position (counter clockwise) until you hear the ignition click.

To adjust the flame size, set the gas control knob to a suitable position between MAX and MIN position.

SSBGS

Single Burner Camp Stove

Assembly Instructions

Parts Included In This Box: 4 Rubber Feet 1 Burner Grate 1 Control Knob 1 Camp Stove



Locate the 4 rubber feet. For shipping, they are twist-tied and placed in a bag under the stove.



Screw the rubber foot into the stove frame.



Be certain to screw into the outer edge frame hole, and not the other three remaining holes.



Securely screw each rubber foot into the four corners.



Locate the burner grate and position it on top of stove.



Locate the control knob.



Position the control knob on front panel of stove and rotate.



All four legs can be adjusted for surfaces that aren't completely level. Rotate the plastic foot pad to compensate for differences in floor surface.



Make sure the control knob is in the off position and attach your Regulator Hose (not included) to the stove back.

Contact: info@sportsmanseriesbrand.com www.sportsmanseriesbrand.com 636-532-9888