

(record your personal 3-8 digit security code)

(Serial Number)

COMPLETE & SUBMIT REGISTRATION CARD TO VERIFY OWNERSHIP

KEEP THIS MANUAL AND SALES RECEIPT FOR FUTURE REFERENCE

If you experience a problem or have questions, call Customer Service at **1-636-532-9888**, **Monday-Friday, 8 AM - 4 PM Central Time**. A copy of the sales receipt is required.



To open an electronic lock the first time, remove the key cover (1). Insert key (2) and turn approximately 20 degrees clockwise (3), then turn knob counter clockwise (4). Pull drawer open and remain open until security code is confirmed. Keep the key in a secure location, not inside the safe. Install batteries (see Battery Installation).

The following numbers are factory preset. You should change the entry code as soon as possible after purchasing the safe to insure proper security.

Primary User Code #1: **1. 2. 3. 4. A**

Secondary User Code #2: **1. 2. 3. 4. 5. 6. B**

Enter the factory code, then **turn the knob counter clockwise to open the drawer**. You will have 5 seconds to turn the handle before the locking mechanism is reactivated. When the valid code is entered, the lock will beep twice and the green LED turns on. When an invalid code is entered three times, the lock will have a long beep, the yellow LED turns on and the safe is locked for 20 seconds. Wrong entry for 3 more times will lock the safe for 5 minutes.

CHANGING YOUR SECURITY CODE

CHANGING USER CODE #1 ALWAYS PERFORM THE OPERATION WITH THE DRAWER OPEN.

- 1) Keep drawer open. Press the RED "reset" button. Two Beeps will confirm.
- 2) Enter 3-8 digit code, then press "A". Two Beeps will confirm success.
- 3) Test the lock operation several times BEFORE closing the drawer.

CHANGING USER CODE #2 ALWAYS PERFORM THE OPERATION WITH THE DRAWER OPEN

- 1) Keep drawer open. REMOVE BATTERIES, THEN REINSERT THE BATTERIES. Press "0 0".
- 2) Press the RED "reset" button. Two Beeps will confirm.
- 3) Enter 3-8 digit code, then press "B". Two Beeps confirm success.
- 4) Test the lock operation several times BEFORE closing the drawer.



(Reset Button)

DO NOT SHUT THE DRAWER UNTIL YOU HAVE CONFIRMED THAT THE NEW SECURITY CODE(S) HAVE BEEN ENTERED CORRECTLY.

***WRONG TRY PENALTY** --- Entry of three (3) consecutive invalid codes starts a 20 second lock out. (During lock out, the key pad will not respond to any operation.) If entry of three more consecutive invalid codes again, the key pad will not respond to any operation for 5 minutes.

If the code fails, follow steps 1 and 2 again. If the code works successfully, record your combination number on the front of this form or somewhere in your records, then you should lock the safe.

SPECIFICATIONS

Size: 7"(H) x 48"(W) x 28"(D)
3 Cubic Feet Of Storage / 2.0mm thick
No Fire Rating
2 x 1/2" Steel Bolts
100 Pound Max Weight Capacity
Includes (4) 1.5V AA batteries



(Remove battery cover here)



(Batteries are installed here)

BATTERY INSTALLATION

This lock requires (4) 1.5V AA batteries. To insert the battery, remove the cover by pressing the tab and removing the cover as shown in the illustration above. Insert batteries and replace the cover.

To test the battery, enter your security code. If the batteries are low, the red light will come on momentarily. Under normal use, batteries will last about 1 year.

TROUBLE KEY/OVERRIDE KEY

A "Trouble Key or Override Key" has been included in the event that you have forgotten or lost your security code. Please record the number of your key in a safe location in the event the key needs to be replaced in the future. To open the safe using the Trouble Key, follow the steps:

1. Remove the cover as shown in the illustration.
2. Insert the key in the key hole.
3. Turn key clockwise 15-20 degrees (until stopped) in order to unlock the safe. You will hear a slight "click".
4. Rotate the knob counter clockwise 15-20 degrees.
5. Keep the drawer open until you have entered a new security code. Before entering your new security code, turn the key back and remove the key and put the cover back in place.
6. Enter your new security code. (DO NOT STORE KEY IN SAFE)
7. Turn knob to it's upright, vertical position.

Installing to Floor

There is a clasp on the each side of the drawer. Press the clasps to remove the drawer to gain access to the holes under the safe.

REPLACEMENT TROUBLE KEY/OVERRIDE KEY

Verification of ownership is required in order to receive replacement key. Contact Customer Service at **1-636-532-9888** to verify registration, then complete the Replacement Form, along with required Service Fees. The Replacement Form must include the Serial Number and Lock number, and be notarized by a non-family member.