

BSWPEG4B / BSWPEG4W

Bar Stool Assembly Instructions

Max Weight Capacity 330 Lb



READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS PRODUCT.

This manual provides important information on proper operation & maintenance. Every effort has been made to ensure the accuracy of this manual. These instructions are not meant to cover every possible condition and situation that may occur. We reserve the right to change this product at any time without prior notice.

IF THERE IS ANY QUESTION ABOUT A CONDITION BEING SAFE OR UNSAFE, DO NOT USE THIS PRODUCT!

DO NOT RETURN THIS PRODUCT TO THE RETAILER - CONTACT CUSTOMER SERVICE.
















If you experience a problem, have questions or need parts for this product, visit our website <http://www.amerihomebrand.com> or call Customer Service at 1-888-287-6981, Monday-Friday, 8 AM - 4 PM Central Time, or email : info@amerihomebrand.com. A copy of the sales receipt is required.

KEEP THIS MANUAL, SALES RECEIPT & APPLICABLE WARRANTY FOR FUTURE REFERENCE.

BSWPEG4B / BSWPEG4W ASSEMBLY INSTRUCTIONS

During assembly, attach screws LOOSELY. Use hex key and hex wrench only when assembly is complete.

PARTS LIST

A		4	B		1	C		2	D		1	E		1
F		8	G		8	H		1	I		4	J		4
K		4	L		1	M		8	N		4	O		1



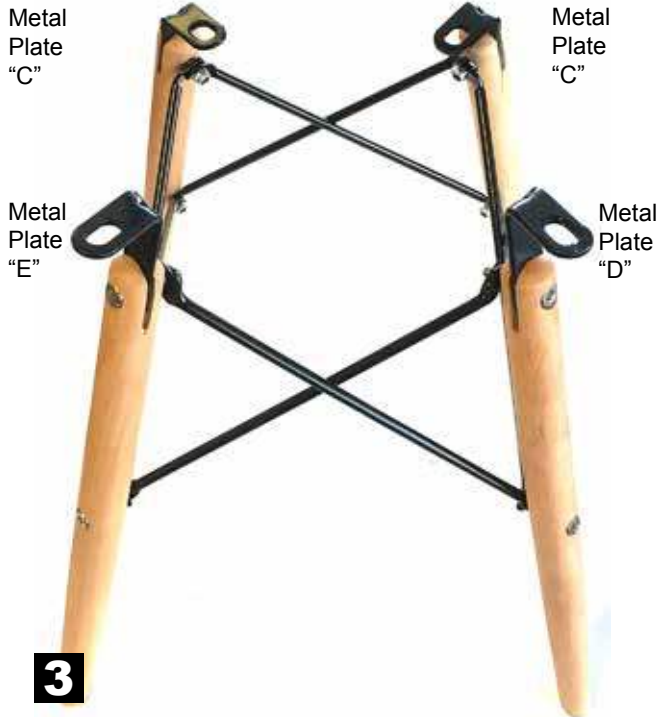
1

Use Long Screw "F" to attach Metal Plate "C" to wooden leg. Note the position of the Metal Plate. (See Illustration #3 below.) Locate Brace.



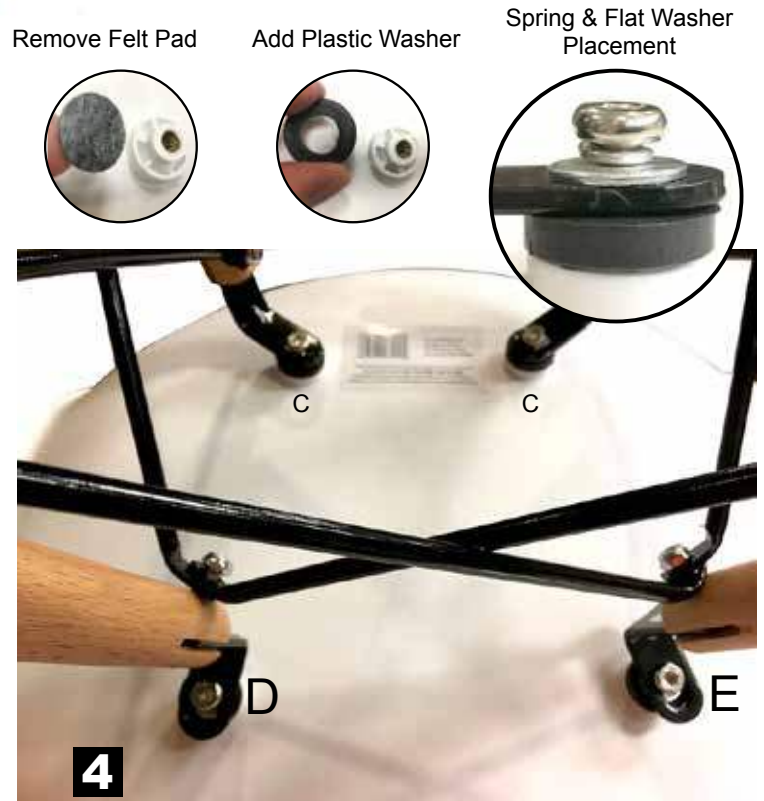
2

Use Long Screw "F" to attach top and bottom of wooden leg to Brace. Confirm the position of Metal Plate "C" is pointing into the center of Brace. Attach screws LOOSELY using Lock Nuts (G).



3

Use Long Screw "F" to attach remaining legs and Metal Plates "C", "D", and "E" in the position as shown above using long screw and lock nuts. Note the position of the Metal Plates "D" & "E" are pointed out. (See Illustration #3.)



4

Turn the seat over and remove 4 felt pads. Use the short screw "K" and attach Metal Plates "C" in the correct position using Spring & Flat Washers. (NOTE: D & E stickers will NOT match). Tighten all screws using Hex Key and Hex Wrench, then attach Plastic Cap "M".