


ITEM # DBCISHD

HEAVY DUTY CAST IRON DOUBLE BURNER STOVE INSTRUCTION MANUAL

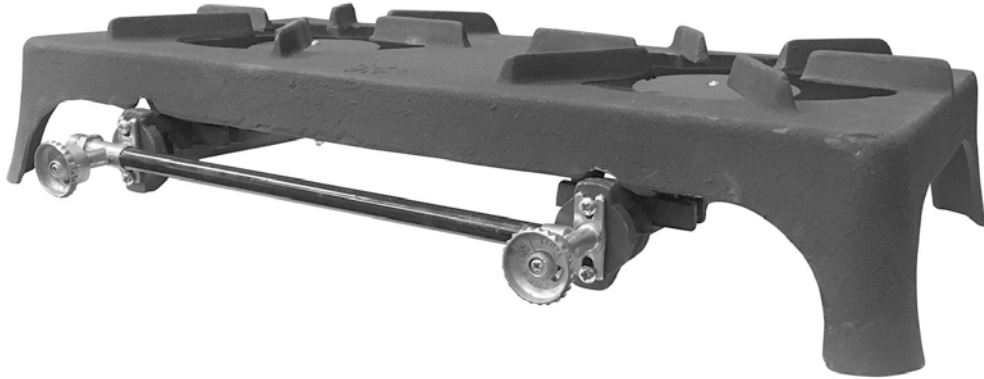

READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS PRODUCT.

Every effort has been made to ensure the accuracy of this manual. These instructions are not meant to cover every possible condition and situation that may occur. We reserve the right to change this product at any time without prior notice.

**IF THERE IS ANY QUESTION ABOUT A CONDITION BEING SAFE OR UNSAFE,
DO NOT OPERATE THIS PRODUCT!**

STOP! Questions? Problems? CONTACT CUSTOMER SERVICE.

If you experience a problem, have questions or need parts for this product, call Customer Service at 1-636-532-9888, Monday-Friday, 8 AM - 4 PM Central Time. A copy of the sales receipt is required.

FOR CONSUMER USE ONLY – NOT FOR PROFESSIONAL USE.

**KEEP THIS MANUAL, SALES RECEIPT & APPLICABLE WARRANTY FOR FUTURE
REFERENCE.**

**FOR OUTDOOR USE ONLY. USE ONLY IN A WELL-VENTILATED AREA. DO NOT
USE INDOORS.**

WARNING

This stove is designed to be used and operated with Liquid Propane Gas (found in a gas tanks like the type used on gas grills. Do not use with 16 oz. or 14 oz canisters.)

You must use a Sportsman 5 Foot LPHK Regulator (sold separately) to properly operate the stove, since the stove will not operate at the gas pressure coming directly from an LP Liquid Propane Gas cylinder.

NOTE: The air screw does not adjust the flame. Flame can only be adjusted using the LPHK5 regulator.

Before each use, always check all gas connections and joints to make sure no leaks are present. Check hoses for cracks and wear, and replace damaged hoses.

When the unit is fully assembled, attach the regulator hose to the propane tank. The lit burner should operate with a blue flame, with a small yellow tip. Adjust the air screw if the flame is sputtering or popping. If the flame is not operating normally, check to see if anything is obstructing the gas flow. **DO NOT OPERATE** the propane stove if you feel that it is not operating normally.

Specifications:

Size: 20" x 10.2" x 4"

Valve: Zinc

Low Pressure Burner

Output: 17,060 BTU/hr

BTU's: 5 kw/hr



4 Medium Screws



2 Long Screws



4 Short Screws



4 Nuts

WARNING

FOR OUTDOOR USE ONLY. USE ONLY IN WELL-VENTILATED AREAS. DO NOT USE INDOORS.



1) To Connect The Regulator Hose To The Double Burner Stove ...

2) Use A Wrench To Tighten This End To Valve.




3) Follow The Manufacturers Directions to Hand-Tighten To Propane Tank

ASSEMBLY

Turn the burner upside down. Use caution as the cast iron construction does not scratch the surface. Attach the two burners using the supplied screws.



Medium Screw

Medium Screw

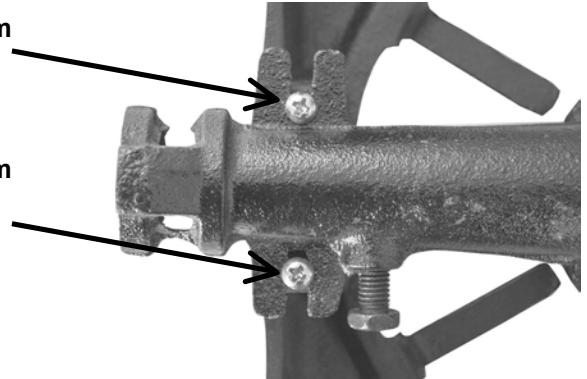

Use Long Screw

Double Nut

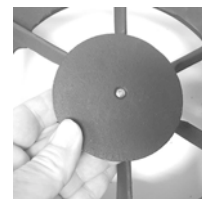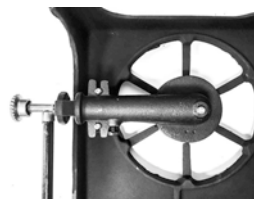

Attach the gas valve using the supplied screws.


Short Screw

Gas Inlet Valve

Short Screw

Air Screw

(Gas Inlet Valve Should Be On LEFT Side)

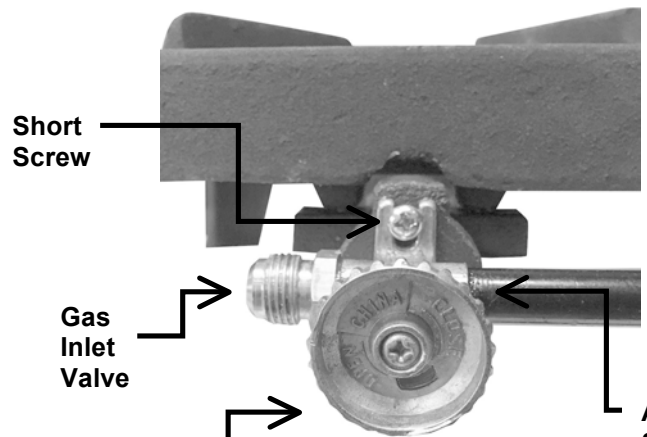

LPHK Regulator Hose Kit (Sold Separately) Required To Use Stove